




— RESIDENTIAL TANKS —
INSTALLATION GUIDE



GUIDELINES FOR PLACEMENT OF RESIDENTIAL TANKS

The following information is a guide to installing and maintaining Residential Tanks from 320L to 4,500L Slimline

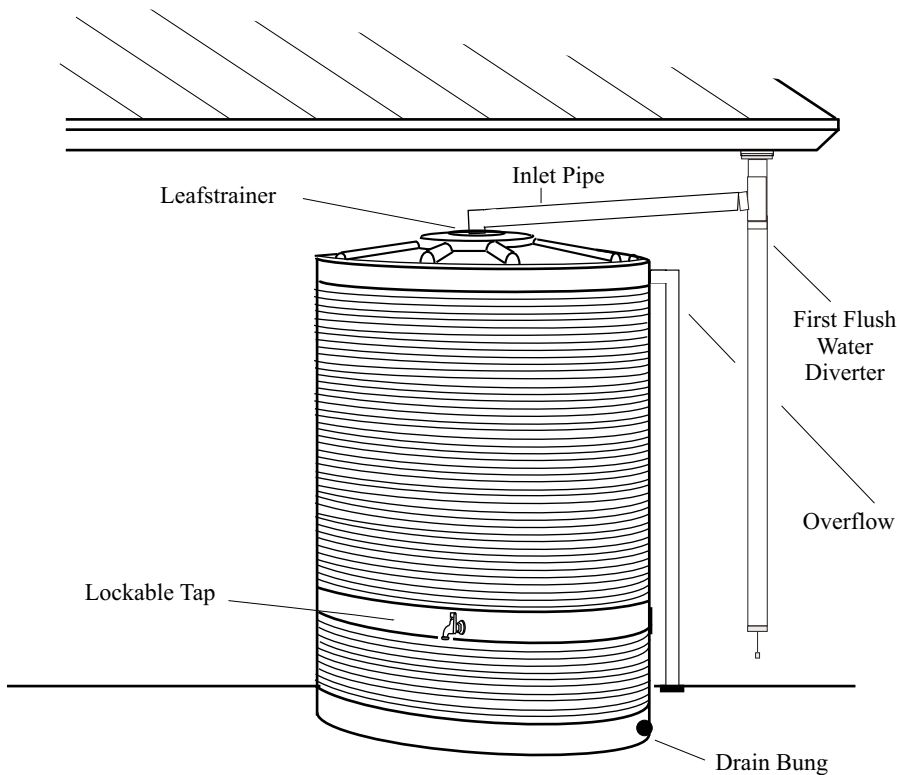

INSTALLATION

Select a smooth, firm, level surface on which to site the tank (paving, concrete or sand are all suitable).

Ensure the roof, gutters and down pipes in the catchment area are clean and free from depressions that may hold leaves, dirt or stale water.

Position the tank so that the tap is easily accessible and the downpipe from the gutter is on a gradual (3% or greater) slope to the leaf strainer on the roof of the tank.

Connect overflow pipe to the fitting provided or install inlet pipe so that it can be removed when tank is full.

NB: Pipework shown on diagram is for demonstration purposes only and not supplied by West Coast Poly.

Standard Fittings Include
Leafstrainer, Lockable Tap, Mosquito Proof Overflow and Drain Bung.

MAINTENANCE

- Allow the first rains to flush clean the roof area and downpipes before directing water into your tank.
- At regular intervals, check to ensure that the gutters, pipework and tank leafstrainer are clean and free from debris.
- Once a year or when the water level falls below the main tap, remove the drain bung at the base of the tank and allow it to drain completely. If any sediment remains in the bottom of the tank, it can be hosed out with tap water.

These simple steps will ensure a continuing supply of clean, fresh rainwater.

WIND LOAD RESTRAINT FOR RESIDENTIAL TANKS

