



— RURAL TANKS —
INSTALLATION GUIDE



INSTALLATION OF RURAL TANKS GUIDELINES

The following information is a guide to installing tanks from 4,500 Litres (1000g) to 50,000 Litres (11,100g)

CRITICAL POINTS TO REMEMBER

- If a sandbase is used we advise that intermittent checks over a period of time should be made for the effects of erosion.
- Base of tank must be fully supported across its entire area (base support must remain flat at all times).
- Failure of the tank due to insufficient base support is not the responsibility of the manufacturer.
- Pipe work should not place any loading on tank wall (flexible coupling is recommended).
- Overflow size must be equal or exceed inlet size.
- Tank must be vented to prevent it being subject to pressure or vacuum (leaf strainer or breather must be installed).

